



564 Diamond-Fyre SS/Enamel/Black Firebacks

96100208 Stainless Steel

96100210 Black Enamel

96100211 Painted Black

Packing List

- Rear Fireback
- (2) Side Firebacks
- Rear Glass Tray Skirt
- Front Glass Tray Skirt
- (2) Light Shields

STAINLESS STEEL WARNINGS

HANDLING THE FIREBACKS: The stainless steel firebacks are shipped in vinyl to prevent marring the surface of the stainless steel. Remove the vinyl prior to installation. **Wear clean gloves when installing the firebacks** to prevent fingerprints on the surface (or use a rag or paper towel to handle the firebacks).

COLORATION AND CLEANING: These stainless steel firebacks will obtain a slight "patina" (brown tint) after use. Do not clean the firebacks. This patina becomes consistent. Any cleaning may lead to unequal coloring. If soot forms on the fireback, we recommend brushing it off with a soft cloth or brush.

CLEANING ENAMEL FIREBACKS

We recommend cleaning the enamel surface with glass cleaner and a soft cloth.

Installation

WARNING Metal firebacks are required for the 564 Diamond-Fyre. Install the firebacks prior to test-burning the fireplace. Install the firebacks prior to installing the crushed glass. Make sure the appliance is cool and electricity has been shut off to the fireplace before installation.

- 1 Remove the glass frame (see manual for details).
- 2 Remove the cast burner cover and place it aside.



- 3 Remove the four screws securing the glass tray. Lift the tray up and place it aside.





TRAVIS INDUSTRIES
HOUSE OF FIRE

564 Diamond-Fyre SS/Enamel/Black Firebacks

96100208 Stainless Steel

96100210 Black Enamel

96100211 Painted Black

NOTE: If you are converting the fireplace to LP (Propane), convert it at this time with the glass tray removed.


- 4 Locate the exhaust restrictor on the firebox ceiling. Remove the two screws holding it in place and place the restrictor aside.



- 5 Remove the two side fireback clips from the firebox ceiling. They are located at the outward edges of the firebox near the glass opening.



The side fireback clip has a keyhole slot. It can be removed by loosening the screw and sliding the clip out.

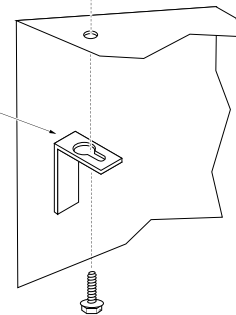

- 6 Hold the rear fireback at an angle and position it behind the burner against the back wall of the firebox. While holding it in place, install the side fireback as shown below.





TRAVIS INDUSTRIES
HOUSE OF FIRE

564 Diamond-Fyre SS/Enamel/Black Firebacks

96100208 Stainless Steel

96100210 Black Enamel

96100211 Painted Black

- 7 Replace the two side fireback clips to secure the firebacks in place (see step 5).
- 8 Replace the exhaust restrictor. NOTE: you may need to adjust the restrictor position, consult the installation manual for details.
- 9 Before replacing the glass tray, **use a screwdriver to bend the four light deflectors up** as shown below. The deflectors must be bent up approximately 2" for the crushed glass to glow correctly.



- 10 Replace the glass tray and secure it with the four screws removed earlier.



- 11 Replace the cast burner cover, making sure the notch on the cover fits over the pilot assembly on the right side.





TRAVIS INDUSTRIES
HOUSE OF FIRE


564 Diamond-Fyre SS/Enamel/Black Firebacks

96100208 Stainless Steel


96100210 Black Enamel

96100211 Painted Black

- 12 Slide the rear glass tray skirt over the tab on the back wall of the firebox. When in place it will form an even edge with the glass tray.

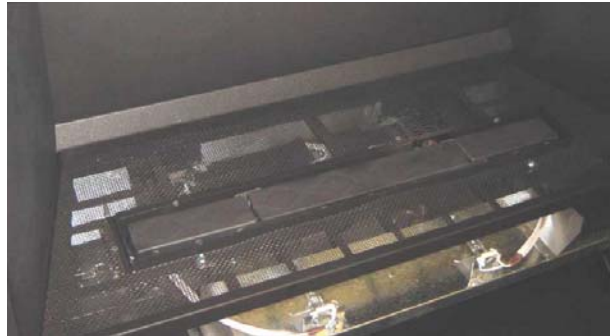

- 13 Two light shields are included with this kit to prevent light from exiting the sides of the front glass tray skirt. Place the shield as shown in the photos below (for both sides).

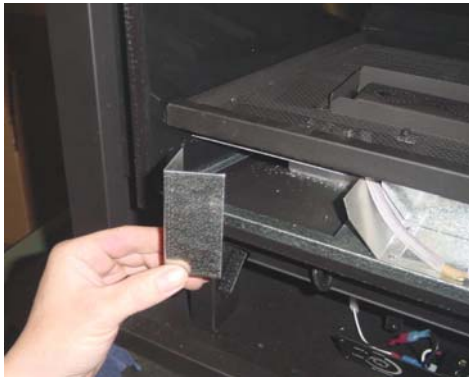

- 14 Slide the front glass tray skirt over the front edge of the glass tray. When in place it will form an even edge with the glass tray and side firebacks.



NOTE: The enamel firebacks may have a slight warp due to the enameling process. Make sure this edge maintains an even $\frac{1}{4}$ " gap. If needed, use a piece of glass media to shim the skirt to insure correct alignment.